INSTALLATION - SERVICE INSTRUCTIONS



SERVICE BULLETIN

NO. 0029 PAGE 1 OF 1

MODULAR STEEL TUBES

APRIL 5, 1994

765 South Pierce Avenue, Louisville, CO 80027 (303) 665-6901 / 800-525-1963

PART NUMBERS : DESCRIPTIONS :

95500 MODULAR HOUSING WITH 4130 TUBES.

PARTS INCLUDED:

1-aluminum modular center section, 2-housing ends of choice, 2-end bells with 4130 3-1/4" tubes, 2-end bell o-rings, 2-anti rotation studs, 16-end bell studs with washers and 12 point nuts, 2-tube retainers, 10-thirdmember attachment studs with nuts and washers, 1-gasket, 1-housing vent, 1-aluminum filler cap with o-ring, 1 pump cover with o-ring and 4-mounting screws and 8-tube retainer studs with washers and nuts.

PRIMARY APPLICATION:

STREET ROD APPLICATION.

INSTALLATION OVERVIEW:

- 1) When assembling modular housing and tubes with end bells be sure all mounting surfaces are smooth (free of nicks). <T>If painting housing all mounting surfaces and studs must be kept free of paint.
- 2) BE SURE END BELL O-RING (2-045) ARE SEATED AND LUBED LIGHTLY.
- 3) THIRDMEMBER GASKET MUST BE .030 THICK.

TORQUE SPECS:

 3/8" - 24 THIRDMEMBER ATTACHMENT STUD NUTS
 30-35 FT. LBS.

 3/8" - 24 TUBE RETAINER STUD NUTS
 30-35 FT. LBS.

 1/2" - 20 END BELL STUD NUTS
 70-75 FT. LBS.

MAINTENANCE REQUIREMENTS:

Periodic inspection of torque on end bell nuts. Periodic inspection of weld between tube retainer and tube. Modular housing requires four (4) quarts of gear lube. M-W recommends Torco SAE 85-140 gear oil. If removing any of the studs, heat around stud area to soften Loctite buildup.

